

Control of Prerotator pulley small

MANDATORY

Repeating Symbols:

Please pay attention to the following symbols throughout this document emphasizing particular information:

*	Warning:	Identifies an instruction, which if not followed, may cause serious injury or even	
		death.	
0	Caution:	Denotes an instruction, which if not followed, may severely damage the gyroplane or	
		lead to suspension of warranty.	
>	Note:	Information useful for better handling.	

1. Planning information

GmbH
or the



2. Material information

2.1	Material cost and	The specific spare part is available on request at AutoGyro GmbH.
	availability	AutoGyro GmbH will cover the cost of the replacement after returning the
		old part.
2.2	Material	If it is necessary to remove a component like lock wire or nylock nuts during
	requirement per	assembly, it is obligatory to replace this part by a new one.
	gyroplane	
2.3	Material	Prerotator pulley small M.PR01.02 or
	requirement per	Prerotator assembly M.PR01
	spare part	
2.4	Rework of parts	None
2.5	Sepcial tooling /	- Loctite 243 (blau) S.WZ10
	lubricant-/	- Loctite 638 S.WZ12
	adhesives-/ sealing	
	compound	

3. Accomplishment / Instructions

3.1	Accomplishment	All the work must be done and confirmed by the following persons or facilities:
		- AutoGyro authorized persons
		- AutoGyro GmbH
	❖ Warning:	Proceed with this work only in a non-smoking area and not close to sparks
		or open flames. Switch off ignition and secure gyroplane against
		unintentional operation. Disconnect negative terminal of aircraft battery.
	❖ Warning:	If it is necessary to remove a component like lock wire or nylock nuts during
		assembly, it is obligatory to replace this part by a new one.
3.2	Instructions	1. Secure gyroplane with park brake on
		2. Secure control stick in full forward position
		3. Adjust flight/brake switch to "brake"
		4. Apply full pressure
		5. Secure rotor system
		6. Remove prerotator drive shaft (photo 4.1)
		7. Check for a second hole through the pulley shaft and remove if affected
		8. Install new pulley with Loctite 638
		9. Install prerotator drive shaft and check for alignment of the hole through
		pulley / drive shaft
		10. Use new nylock nut and Loctite 243
		11. If the prerotator assembly is worn, replace with new assembly M.PR01
3.3	Test run	Conduct test run and prerotate rotors
3.4	Summary	These instructions (section 3) have to be conducted in accordance with
		compliance in section 1.4. Confirm the implementation of the specific
		service bulletin in aircraft log.


Michael W. Schuler

Phone: +49 (0) 51 21 / 8 80 56 -00 Fax: +49 (0) 51 21 / 8 80 56 -19




4. Photos

4.1 Picture shows the connection between prerotator pulley and drive shaft

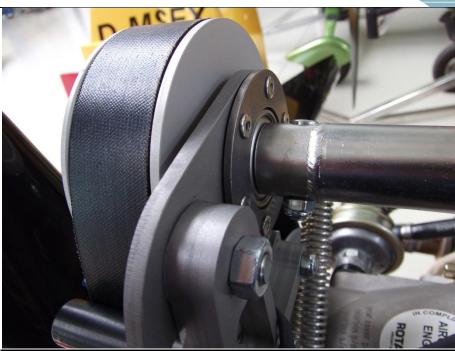

4.2 Picture shows the prerotator pulley shaft with correct hole

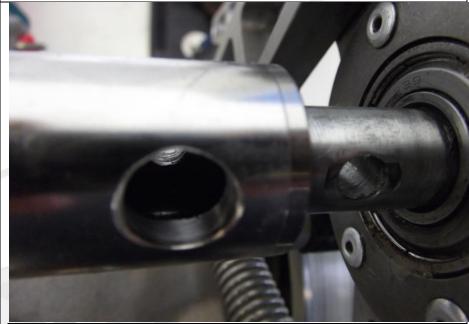



4.3 Picture shows the prerotator pulley shaft with incorrect holes



